



3-5 PSI
PRESSURE
SWITCH
TIG31055


7-10 PSI
PRESSURE
SWITCH
TIG31056

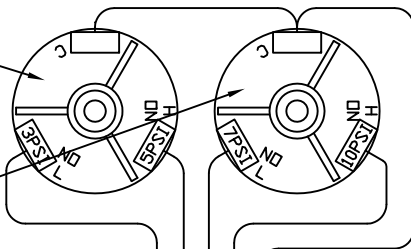

HAND
CONTROL
SWITCH
JL310304
(OPTIONAL)

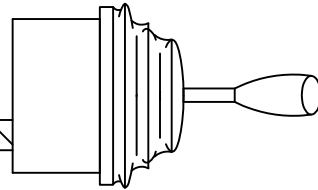


ABS CONTROL
RELAY

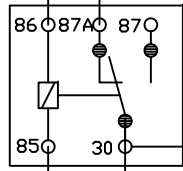

WHT 18G
TO ABS
CONTROL
WHT 18G




ABS INTERFACE
CONNECTOR FRONT VIEW




TO SPEED SIGNAL — TAN 18G

GRY 18G — DO NOT CONNECT

PNK 18G
TO ABS
WARNING

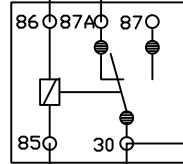



RED 18G

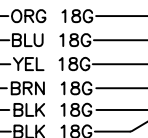

ORG 18G
BLU 18G
YEL 18G
BRN 18G
BLK 18G
BLK 18G


ORG
BLU
YEL
BRN
BLK

LIGHT
BAR
DISPLAY
TIG11010

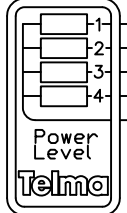

ORG/WHT
BLU/WHT
YEL/GRN
BRN/WHT
BLK


BATTERY
DISCONNECT
SWITCH

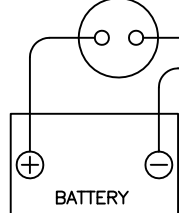



BATT.(+) RED 2/0
BATT.(-) BLK 2/0

TL134035
UNIVERSAL AIR BRAKE
WITH ABS INTERFACE

AXIAL (CC)
WIRING
CONNECTIONS

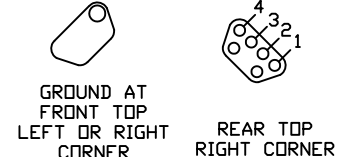

TELMA RELAY BOX JD331121

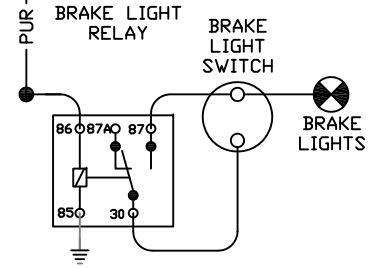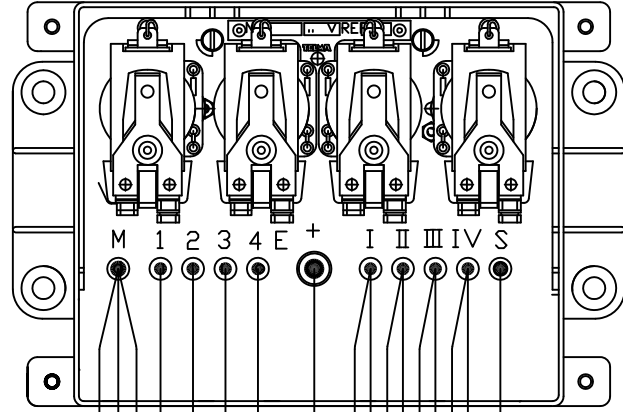

(ONLY WITH OPTIONAL HAND CONTROL)

