


TL134068
 AIR BRAKE WIRING
 DIAGRAM
 iRCS J1939 CAN
 AIR BRAKES
 12-19-23 AZ

J1939 CAN control features:
 TRCM active outputs turn off
 under the following conditions.
 1) during ABS event
 (with progressive reactivation)
 2) Speed below 2 mph
 3) Throttle position greater than 1%
 4) Cruise Control is engaged

iRCS
 JE1002122
 12V

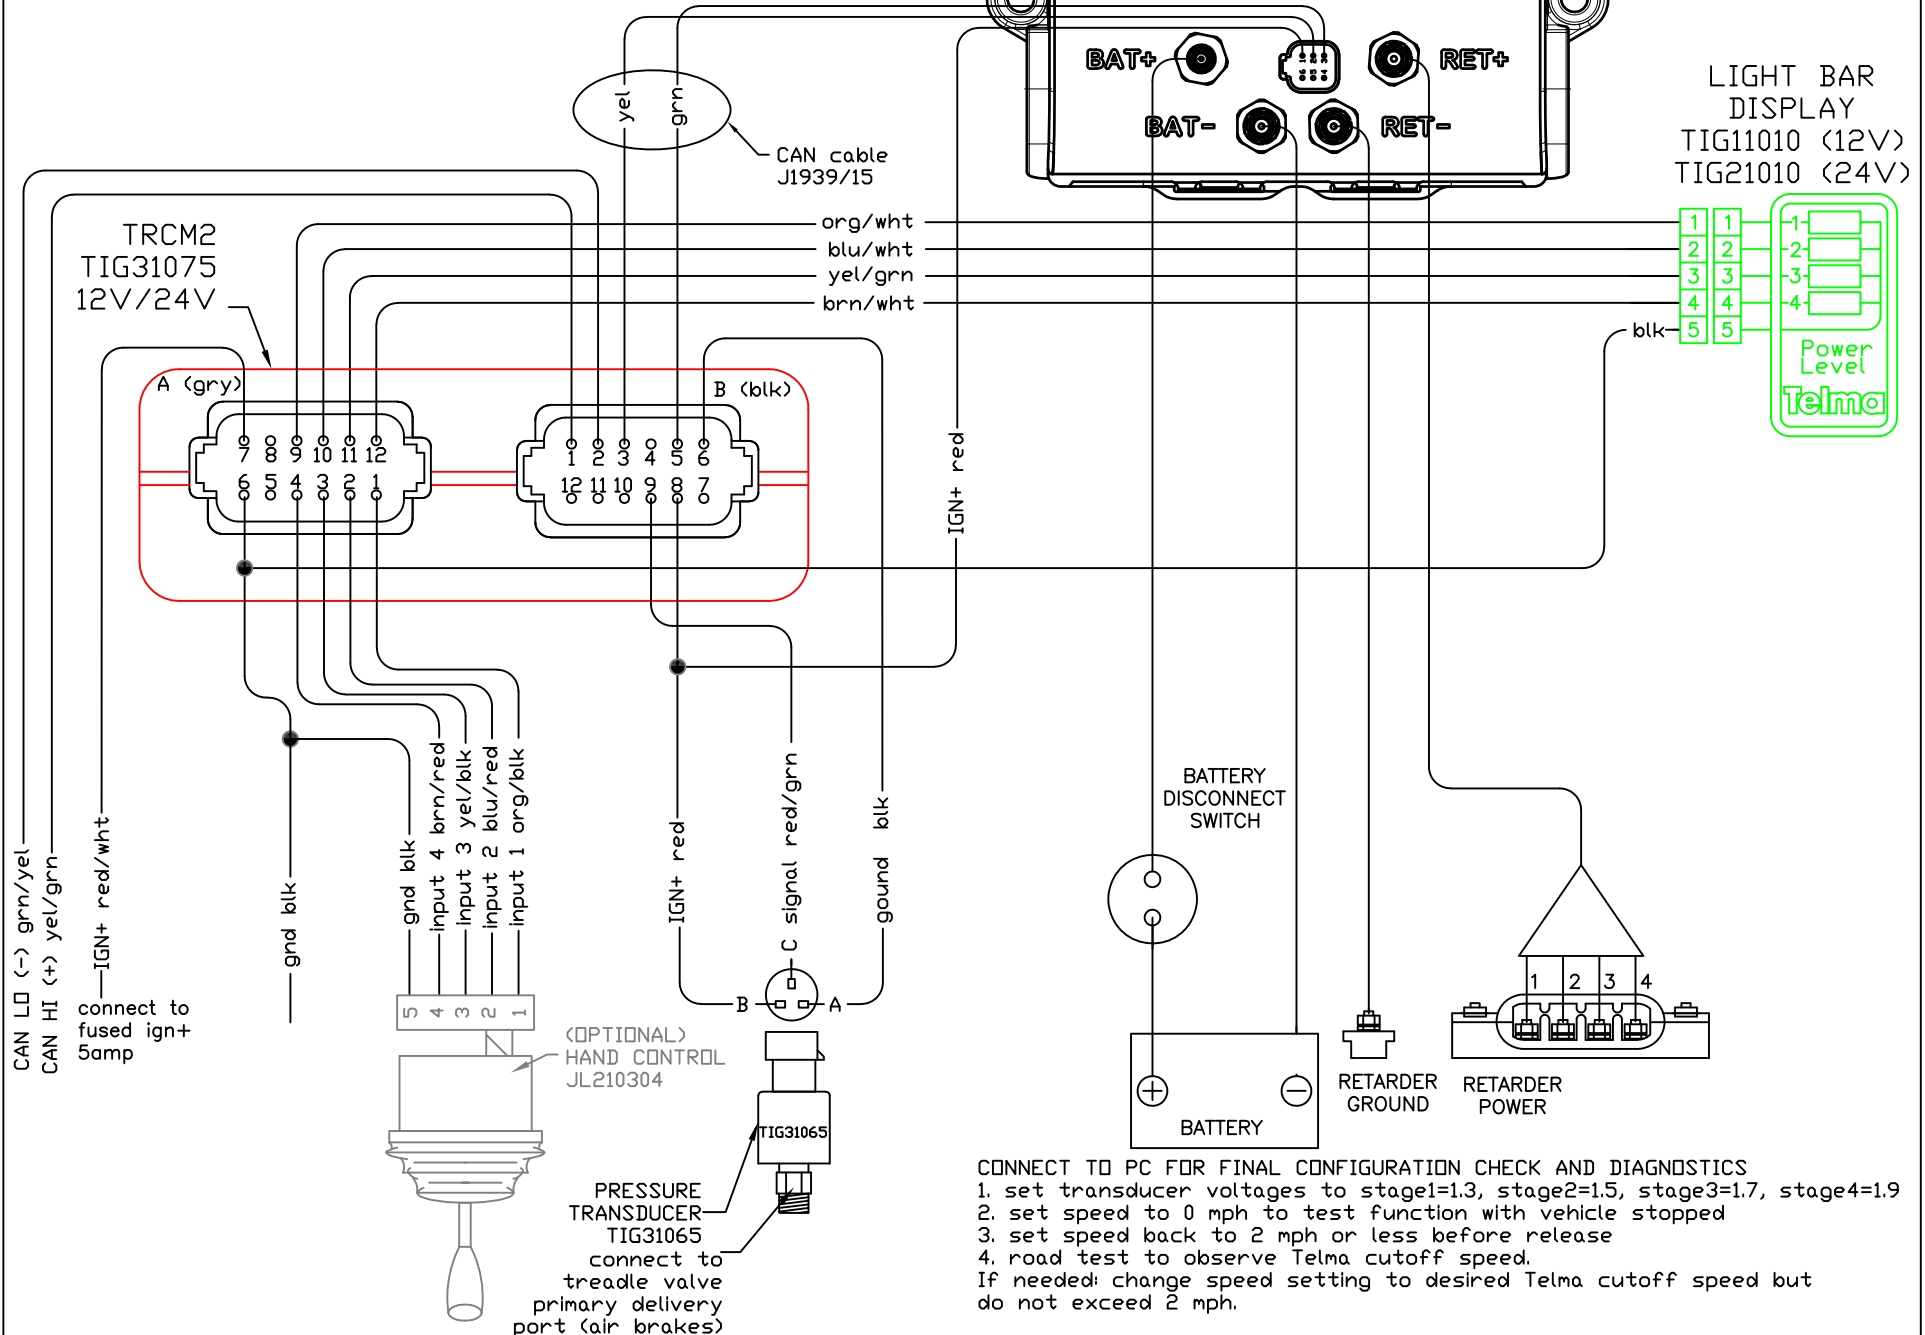

CONNECT TO PC FOR FINAL CONFIGURATION CHECK AND DIAGNOSTICS
 1. set transducer voltages to stage1=1.3, stage2=1.5, stage3=1.7, stage4=1.9
 2. set speed to 0 mph to test function with vehicle stopped
 3. set speed back to 2 mph or less before release
 4. road test to observe Telma cutoff speed.
 If needed: change speed setting to desired Telma cutoff speed but do not exceed 2 mph.