



7-10 PSI
PRESSURE
SWITCH
TIG31056



RELAY BOX JD331121
OR
ELECTRONIC POWER MODULE
(BEP) JE341121
ON CHASSIS RAIL

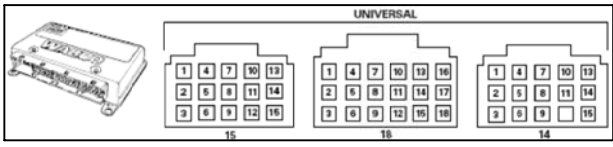


3-5 PSI
PRESSURE
SWITCH
TIG31055

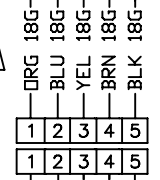


ABS INTERFACE
CONNECTOR FRONT VIEW
JC241103 ALLISON AT-MT-HT
AND MANUAL TRANSMISSION
JC241105 ALLISON WORLD

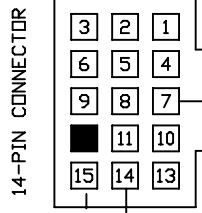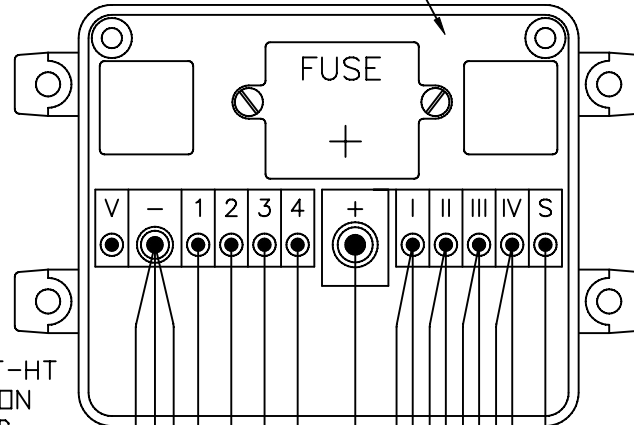

ABS CONTROL
RELAY

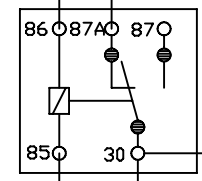


ground during
ABS wheel slip



TO SPEED SIGNAL — TAN 18G

GRY 18G — DO NOT CONNECT

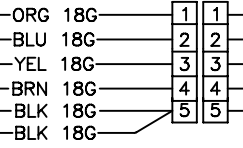

ORG 18G
BLU 18G
YEL 18G
BRN 18G
BLK 18G

1 1
2 2
3 3
4 4
5 5


ORG
BLU
YEL
BRN
BLK

OPTIONAL

IGN "+"


IGN "+"

ABS WARNING
RELAY

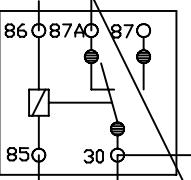


DO NOT
CONNECT
IF
MULTIPLEXED

TO
IGNITION
"+"




LIGHT
BAR
DISPLAY
TIG11010

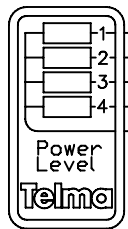


BATTERY
DISCONNECT
SWITCH

1 1
2 2
3 3
4 4
5 5

ORG/WHT
BLU/WHT
YEL/GRN
BRN/WHT
BLK

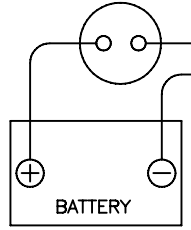

BATT.(+) RED 2/0
BATT.(-) BLK 2/0

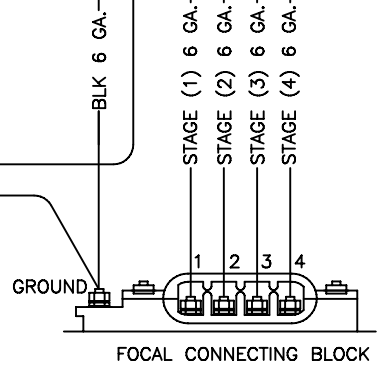

TELMA AIR FOOT CONTROL WIRING
WABCO E VERSION CAB AIR ABS
28sep06